


Please read all instructions **BEFORE** assembly and **USE** of product.
KEEP INSTRUCTIONS FOR FUTURE REFERENCE.

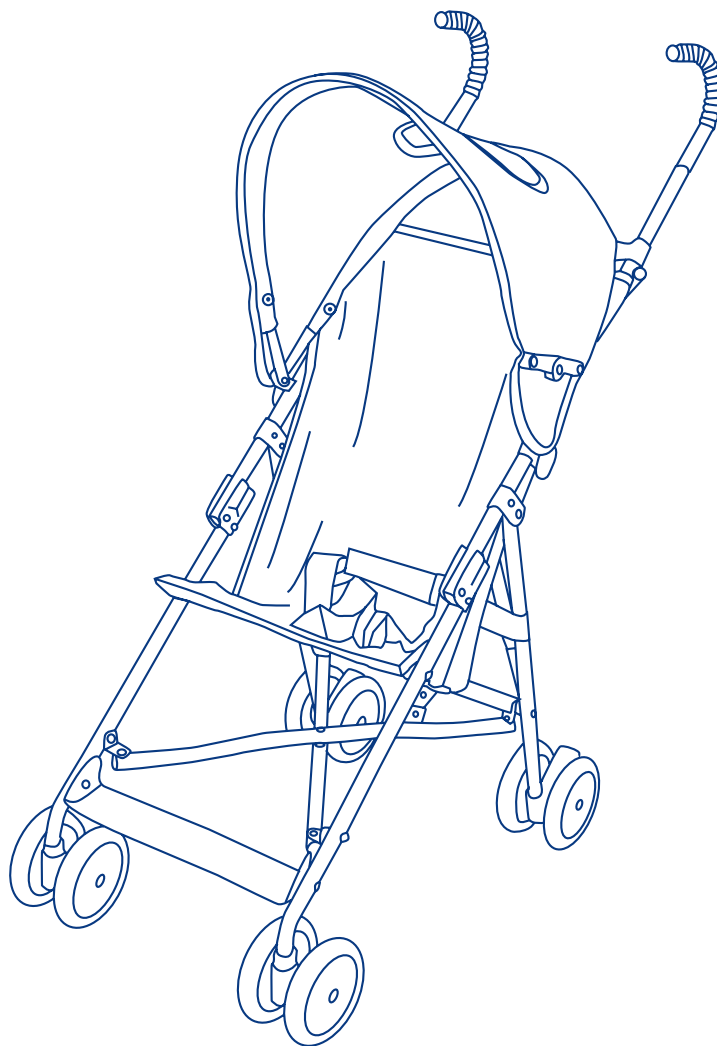

Umbrella Stroller with Canopy

Instruction Manual



Umbrella Stroller

⚠️ WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

⚠️ WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the seat belt and insure that the child is properly positioned according to these instructions.

⚠️ WARNING: Never leave child unattended.

- * Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.
- * Be certain the stroller is fully erect and latched in the open position before allowing the child near the stroller.
- * The stroller is designed to be used with a child who can sit up unassisted, approximately 6 months of age. Use of the stroller with a child weighing more than 35 pounds or over 40 inches tall will cause excessive wear and stress on the stroller and may cause hazardous unstable conditions to exist.
- * **DO NOT** use the stroller on stairways or escalators.
- * **NEVER** allow your stroller to be used as a toy
- * To clean use only mild household soap and warm water with a sponge or cloth.
- * Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed
- * Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.

Please: If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at (800) 328-7363 between the hours of 8:00a.m. and 4:30p.m. Pacific Standard Time or visit us at www.babytrend.com. Please do not return the product to the store as once it is returned it cannot be re-sold and the materials and energy used to make it are wasted.

To contact us:

BABY TREND, INC.
1567 S. Campus Ave.
Ontario, CA 91761

Parts Hotline:
(800) 328-7363
8:00am to 4:30pm Pacific Standard Time



TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

TO UNFOLD AND FOLD STROLLER

TO UNFOLD

1. Release the folding latch, which is located on the right side. (Fig. 1)
2. Lift up on the stroller handles with both hands until the stroller frame is unfolded. (Fig. 2)
3. Using a foot, press down on the folding cross bar to lock the stroller open. (Fig. 3)

TO FOLD

1. Push red lever to the left and lift up. (Fig. 4)
2. Push handlebars forward and squeeze stroller together. (Fig. 5)
3. Secure the stroller in the folded position by locking the latch on the side of the stroller. (Fig. 1)

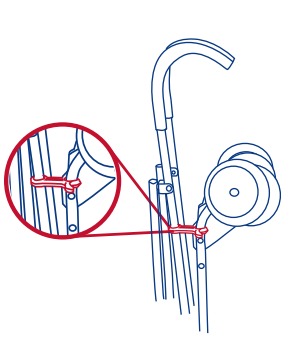


Fig. 1

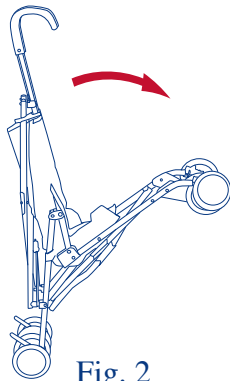


Fig. 2

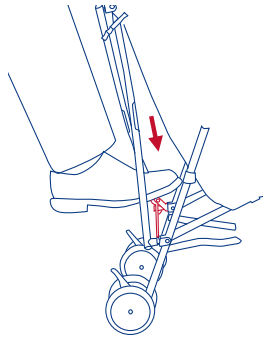


Fig. 3

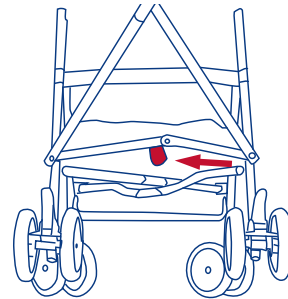


Fig. 4

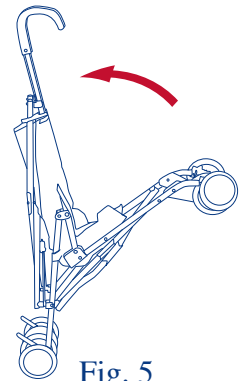


Fig. 5

TO SECURE THE CHILD

⚠ WARNING: Always use the seat belt to void serious injury from falling or sliding out.

1. Carefully place the child in the stroller seat and bring the seat belt around the child's waist. Place the crotch strap between the child's legs. (Fig. 6)
2. Insert the male end of each seat belt into the crotch strap buckles until snapped into place. (Fig. 7 & 7A)
3. Tighten the seat belt to be snug around the child's waist.
4. To release, apply pressure to both sides of each male clip until the clips are released. (Fig. 8) This process requires a moderate amount of pressure to prevent an accidental release.

THIS UPRIGHT SEATING POSITION SHOULD BE USED ONLY FOR A CHILD THAT CAN SIT UP UNASSISTED, APPROXIMATELY 6 MONTHS OLD.

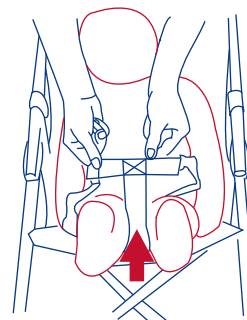


Fig. 6

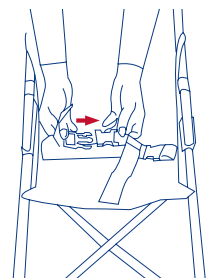


Fig. 7



Fig. 7A

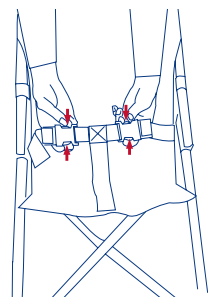


Fig. 8

BRAKES

⚠️WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may roll away.

- To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on each brake cluster. (Fig. 9) Note: Always check that the stroller will not move and that the brakes are properly applied.
- To release, gently lift up on the brake lever. (Fig. 10)

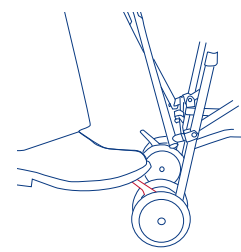


Fig. 9

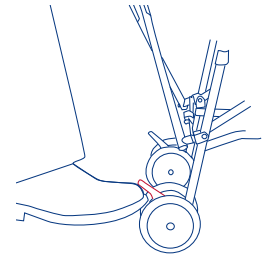


Fig. 10

IF EQUIPPED WITH CANOPY

- To attach a removable canopy, clip the canopy brackets over the handle tubes just above the joint. (Fig. 11)
- To open the canopy, push forward on the front of the canopy. Secure in the open position by pushing downward on the canopy stretchers on each side of the canopy. (Fig. 12)
- The canopy must be in the closed position prior to folding the stroller. To close canopy, pull upward on the canopy stretchers to unlock. Pull rearward on the front of the canopy. (Fig. 13)

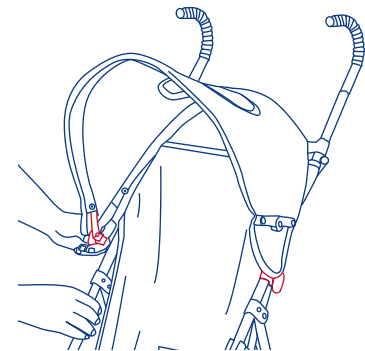


Fig. 11

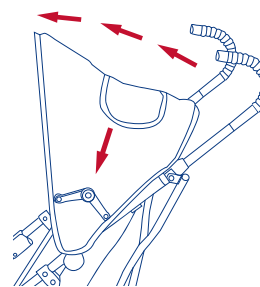


Fig. 12

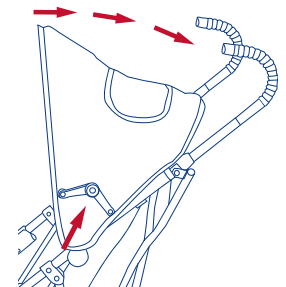


Fig. 13



IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT
PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT (800) 328-7363
BETWEEN THE HOURS OF 8:00AM AND 4:30PM PACIFIC STANDARD TIME OR VISIT US AT
WWW.BABYTREND.COM FOR ASSISTANCE.