

Read all instructions **BEFORE** assembly and **USE** of product.
KEEP INSTRUCTIONS FOR FUTURE USE.

baby trend[®]



Model #1305

SNAP N GO[®]

Instruction Manual

WARNINGS

⚠️ WARNING: Please follow all of these instructions to ensure the safety of your children. Keep these instructions for future reference.

⚠️ WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the infant car seat harness and insure that the child and infant car seat are properly positioned according to these instructions.

⚠️ WARNING: Never leave child unattended.

⚠️ WARNING: Care must be taken when folding and unfolding the product to prevent finger entrapment.

- Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.
- The maximum weight that can be carried in the basket is 5 lbs. The maximum weight for the parent tray is 3 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- Be certain the stroller is fully erect and latched in the open position before allowing the child near the stroller.
- Use of the stroller with a total weight of more than 40 pounds will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- **NEVER** use the stroller on stairways or escalators.
- **NEVER** allow your stroller to be used as a toy.
- To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.

 
If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at 1-800-328-7363 between the hours of 8:00 and 4:30 Pacific Standard Time. Please do not return the product to the store as once it is returned it cannot be re-sold and the materials and energy used to make it are wasted.

To Contact us:

Baby Trend, Inc.
1607 S. Campus Ave.
Ontario, CA 91761

Parts Hotline:
1-800-328-7363
8:00 a.m. and 4:30 p.m. Pacific Standard Time


PARTS

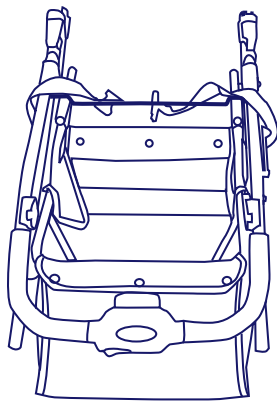


Stroller



 Rear Axle



Parent Tray

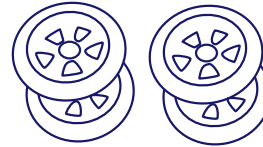 

Front Wheels

ASSEMBLING

TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY:

- Remove stroller from box. The front wheels, rear wheels and parent tray need to be installed prior to use.
- To attach the front wheels, unfold stroller as described in the section following. See figure 1. Lean the stroller backwards so that it rests on the handle and rear frame tubes and the front wheel bayonet are pointing upward. Position the front wheel assembly at the front wheel bayonet such that the swivel assembly will slide onto the front wheel bayonet. Push each front wheel assembly onto the front wheel bayonet until snapped into place. Pull on the wheel assembly to ensure that it is securely attached to the stroller. Please see figure 2.
- Lean the stroller forward to rest on the front wheels. To attach the rear wheels, position the rear axle and wheel assembly such that the brake levers are facing to the rear of the stroller. Press the rear wheel assembly onto the rear frame tubes being careful that the push buttons on the forward side of each rear tube engage the hole on the forward side of each rear wheel housing. Pull on the rear wheel assembly to ensure that it is securely attached to the stroller. Please see figure 3.

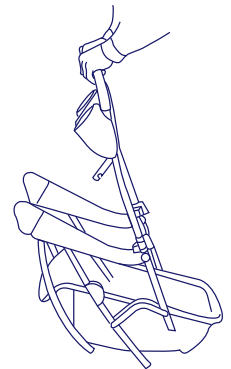 


Figure 1.

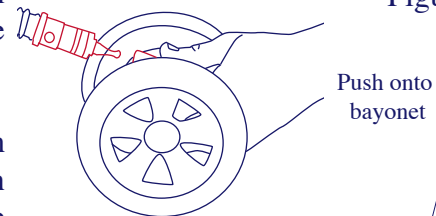 


Figure 2.

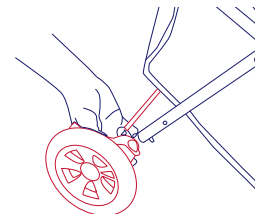 


Figure 3.

Ensure that the wheels are firmly locked into place. Do Not use the stroller if the wheels are not locked into place, but rather contact our customer service department immediately at 1-800-328-7363, between the hours of 8:00am and 4:30pm PST, for assistance.

BASKET

Rear basket tube needs to be installed prior to use. Insert the female end of the rear basket tube into the male ends located on the basket frame until it locks into place. (Fig. A)

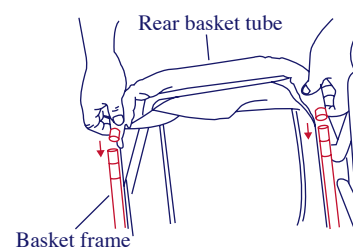 


Figure A

- To attach the parent tray, position the tray so that the hinges for the storage compartment are facing forward. Attach one end at a time by locating the fitting at the top of the frame and the hole on the side of the parent tray, snap together. Repeat for other side. Check that the tray is securely latched in place. Please see figure 4. To remove parent tray, reverse the installation steps.

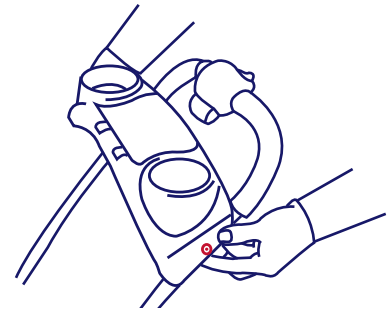 


Figure 4.

⚠ WARNING: Do not place hot liquids in the parent tray. Hot liquids can burn your child. Do not place more than 3 pounds in the tray as it may cause a hazardous unstable condition to exist.

⚠ WARNING: Avoid serious injury from falling or sliding out. Always use the Infant Car Seat harness.

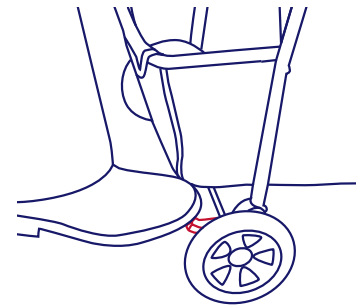 


Figure 5.

BRAKES

⚠ WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.

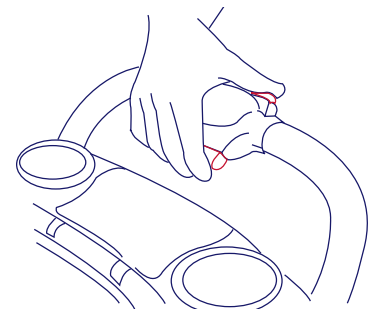 


Figure 6.

- To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with the each wheel brake cluster. See figure 5. Check that the stroller will not move and that the brakes are properly applied. To release, gently lift up on the brake lever.

TO FOLD STROLLER:

Do Not allow children near stroller while folding.

- To fold the stroller slide the red handle in the center of the handle to the left and squeeze while pushing forward on the handle. Once the stroller begins to fold, release the red handle and pull backward on the front frame until stroller is folded. Please see figure 6. Secure the stroller in the folded position by latching the fold latch, located on the right side of the stroller at the intersection of the handle and the rear tube, over the extended rivet on the lower frame tube. Please see figure 7.

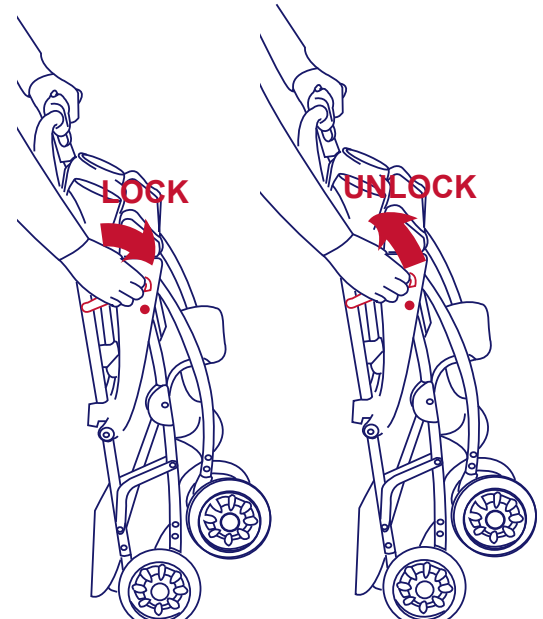 


Figure 7.

Figure 8.

TO UNFOLD STROLLER:

Do Not allow children near stroller while unfolding.

- Release the folding latch, which is located on the right side. See figure 8.
- Lift up on the stroller handle with both hands until the stroller frame is erect and locked in the open position. See figure 9. The stroller has spring-loaded latches on both sides of the frame. Test that both latches are fully engaged prior to placing your child in the stroller.

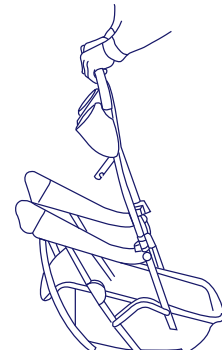 


Figure 9.

TO ATTACH AN INFANT CAR SEAT

- Place car seat onto front bar. See figure 10. **NOTE: Some brands of infant car seats will lock onto the front bar, and some brands may simply rest on the front bar, You must ALWAYS use the safety belt to secure every car seat that is placed on the snap n go.**
- Make sure the front of the car seat rests on the red support tabs located on the frame. See figure 11. **NOTE: For wider car seats there is a higher support tab located above the main red support tabs. See Figure 11.**
- Strap the safety belt over the car seat and connect the buckles together. Tighten the strap so the car seat fits snug and can't move. See figure 12. **NOTE: Some car seats have slots for the safety belt to slide through, if you have a car seat with these slots please feed the safety belt through each slot and secure. See figure 13.**

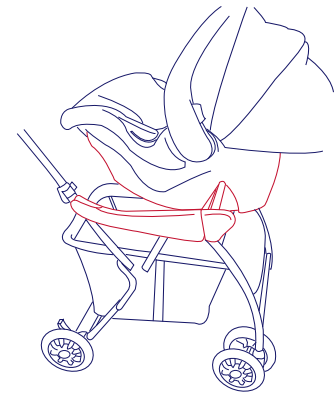 


Figure 10.

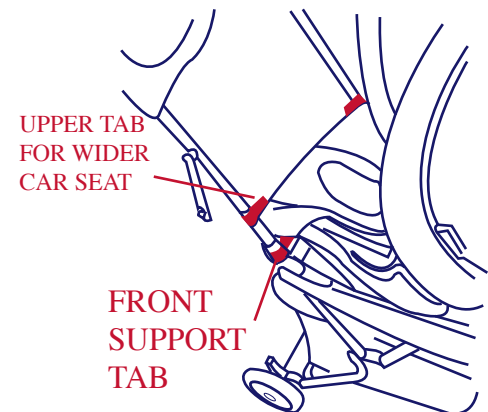 


Figure 11.

⚠ WARNING: Avoid serious injury from falling, **ALWAYS** use the safety belt to secure carseat to stroller.

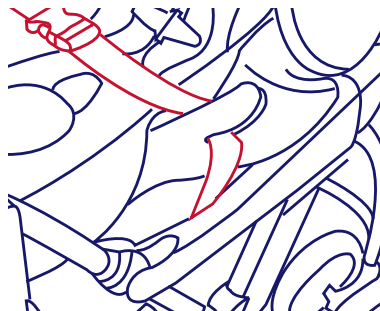 


Figure 13.

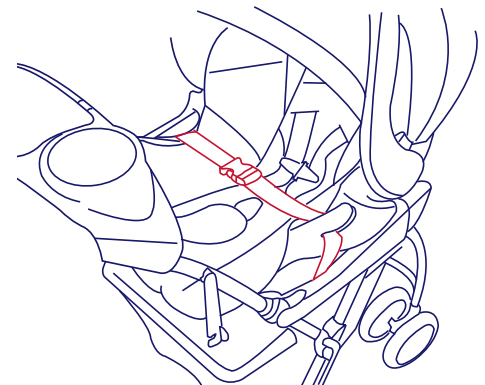 


Figure 12.

IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-328-7363 BETWEEN THE HOURS OF 8:00AM AND 4:30PM PACIFIC STANDARD TIME FOR ASSISTANCE.