



Quality • Comfort • Style

Baby Trend, Inc.
13048 Valley Blvd.
Fontana CA 92335

www.babytrend.com

Imported by:

KG Group
49-51 Sunmore Close,
Heatherton Vic 3202, Australia

Customer Service:
KG Group
039-555-9670
support@kgelectronic.com.au

**Read all instructions BEFORE assembly and USE of product.
KEEP INSTRUCTIONS FOR FUTURE USE.**




WG01XXX AU
Expedition 2-in-1 Stroller Wagon
Instruction Manual




Quality • Comfort • Style

PARTS


Check that you have all the parts for this model before assembling the stroller.

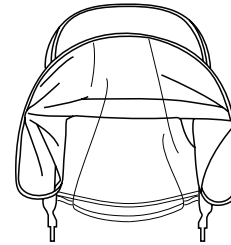


Canopy with Mosquito Net

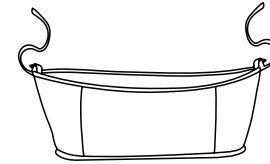


Soft Parent Organizer

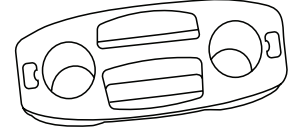


Child Tray

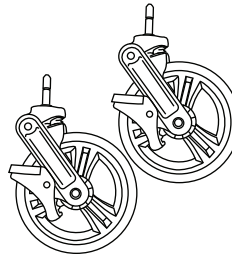

(2) Front Wheels

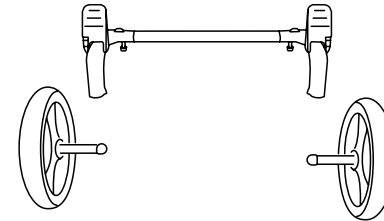

Rear Axle and (2) Wheels

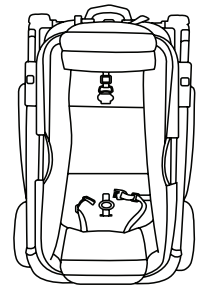

Wagon Frame

WARNING

 **WARNING:** Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

 **WARNING:** Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out, always use the safety harness and ensure that the children are properly positioned according to these instructions.

 **WARNING:** Never leave children unattended.

 **WARNING:** Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

- **CAUTION:** This stroller is designed for up to 2 children only. Use with more than 2 children may cause an unbalanced condition which can injure/harm your child. Children must be at least 6 months old and be able to sit upright unassisted.
- Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause a hazardous, unstable condition.
- Be certain the stroller is completely opened and locked in place before allowing a child near the stroller.
- The maximum weight that can be carried in the child tray is 5 lbs (2.26 kg).
- The maximum weight that can be carried in the soft parent organizer is 2 lbs (0.90 kg).
- The maximum weight capacity is 45 lbs (20.36 kg) for frontal seat and 35 lbs (15.84 kg) for rear seat. The maximum weight capacity of the stroller in combination with any accessories is 90 lbs (40.82 kg) total. Exceeding the weight limit will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- **NEVER** use the stroller on stairways or escalators.
- **NEVER** use the stroller with roller skates, in-line skates, skateboards or bicycles.
- **NEVER** allow your stroller to be used as a toy.
- To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- Discontinue use of stroller should it malfunction or become damaged.

WARNING

 **WARNING:** TO AVOID INJURY OR DEATH:

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

- PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.

- DO NOT LEAVE CHILDREN UNATTENDED.

- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.

- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.

- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.

- NOT RECOMMENDED FOR A CHILD UNDER 6 MONTHS OLD.

 **WARNING:** USE THE HARNESS AT ALL TIMES.

 **WARNING:** USE THE TETHER STRAP TO STOP THE STROLLER FROM ROLLING AWAY.

 **WARNING:** Not intended for infant sleep and should never be used for this purpose.

NEVER leave the harness buckled when not fitted to a child in the stroller because the harness can form loops which may pose a strangulation hazard.

ALWAYS take care and pay attention when erecting and folding the stroller as moving parts can cause injury.

ALWAYS make sure the storage latch is properly engaged before moving or lifting the stroller.

ALWAYS keep stroller away from fire or any open flame. It is unsafe to use accessories other than those approved by the vehicle manufacturer.

ASSEMBLY

IMPORTANT! To ensure safe operation of your product, please follow these instructions carefully. Please keep these instructions for future reference.

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. **NEVER** use if any parts are missing or broken.

IMPORTANT! Adult assembly is required.

⚠ WARNING: Care must be taken when unfolding the stroller to prevent finger entrapment.

CAUTION: Do not allow children near stroller while unfolding.

ASSEMBLY

FRAME SETUP

To attach the wheels, unfold stroller as described in the following section:

- 1) • Release the storage latch (Fig. 1a).
- Unfold the stroller frame by pulling the stroller handle upward until it clicks into locked position (Fig. 1b).

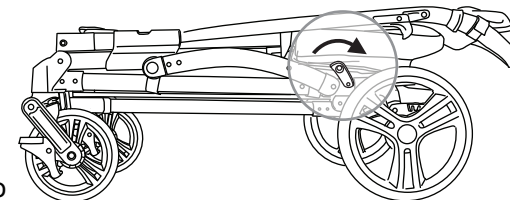


Fig. 1a

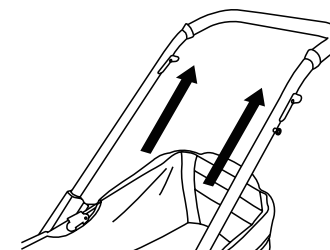


Fig. 1b

- The **RED** indicator on the handle will not be visible when stroller is fully open. If **RED** indicator are visible check open position lock is engaged before continuing. (Fig. 1c).

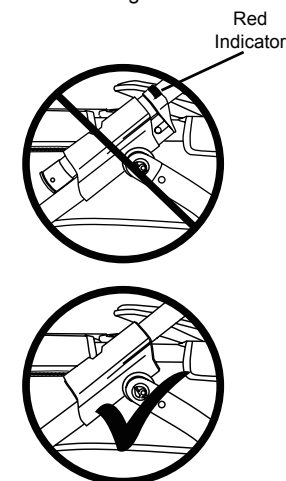


Fig. 1c

ASSEMBLY

FRONT WHEELS

- 2) • Insert front wheel axle pin into the wheel hub until the wheel locks firmly into place. Repeat on other side. (Fig. 2a).
NOTE: Pull on the wheel assembly to ensure that it is securely attached to the stroller.

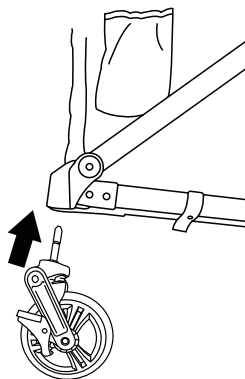


Fig. 2a

REAR AXLE-WHEELS

Attach the rear axle assembly and wheels as follows:

- 3) • Position stroller with rear leg tubes facing upward. Place the rear axle with wheels over the rear legs and apply downward pressure on both sides. Ensure both sides lock into place (Fig. 3a).

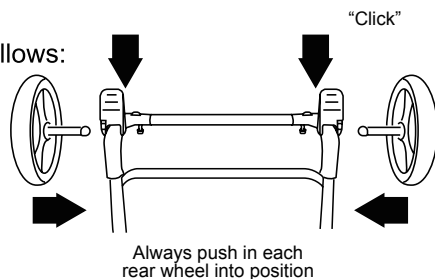


Fig. 3a

NOTE: NEVER use stroller if wheels do not lock into place. If you need assistance, please contact our customer service department KG Group at 039-555-9670 or support@kgelectronic.com.au

ASSEMBLY

SOFT PARENT ORGANIZER

⚠ WARNING: Do not place hot liquids or more than 2 lb. (0.90kg) pounds in the parent tray. Serious burns or unstable conditions can result.

- 4) • **Strap In The Soft Parent Organizer:**
Use the hook and loop to hang the soft parent organizer onto the stroller handle. Follow illustrations 1-3 (Fig. 4a). Be sure to fasten tightly.

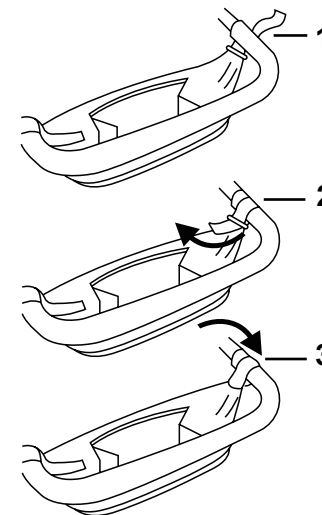


Fig. 4a

CHILD TRAY

⚠ WARNING: Do not place hot liquids or more than 5 pounds in the child tray. Serious burns or unstable conditions could result.

- 5) • Attach child tray by lining up the corresponding slots located on stroller frame. Slide down into position until locked into place (Fig. 5a).
NOTE: Check to make sure the child tray is secure before using.

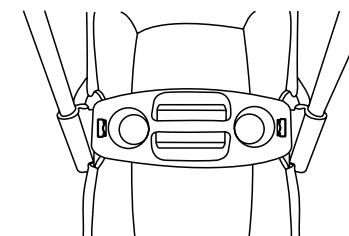


Fig. 5a

ASSEMBLY

CANOPY

- 6) • **To install the canopy:** Add the canopy frame into the designated slots located on the child tray (Fig. 6a).

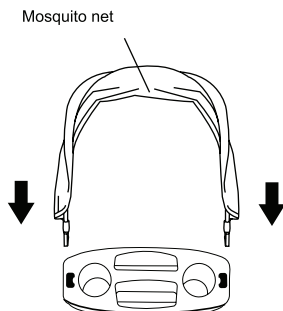


Fig. 6a

- **To open the canopy:** Behind the main fold mechanism use the strap and snap closure to anchor the canopy. Firmly spread out both sides of the canopy (Fig 6b).

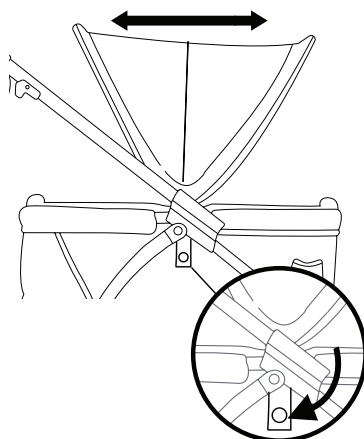


Fig. 6b

- **Install mosquito net:** Unzip and pull out the net from the storage pocket. Stretch the net around the top edge of the frame. Repeat for the other side (Fig. 6c).


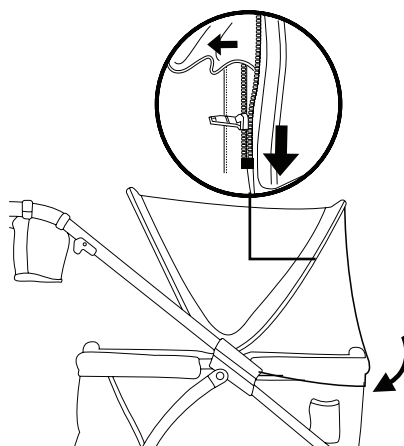


Fig. 6c

ASSEMBLY

- **To store away the mosquito net:** the mosquito net at the elastic end and start to roll toward canopy. Locate the zipper attached to canopy end and connect zipper to track. Continue to tuck canopy into pocket while zipping pocket closed (Fig. 6d). **NOTE:** Tuck and Zip in sections.

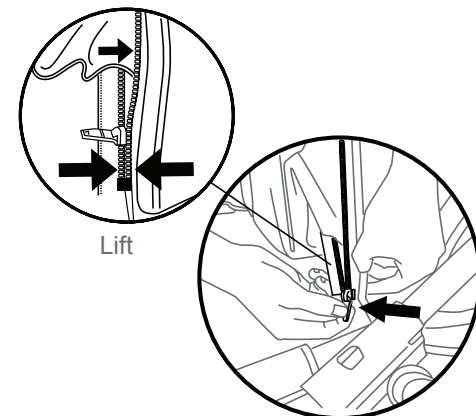

Lift

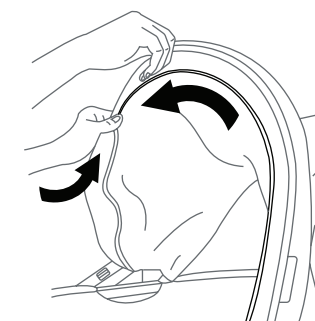
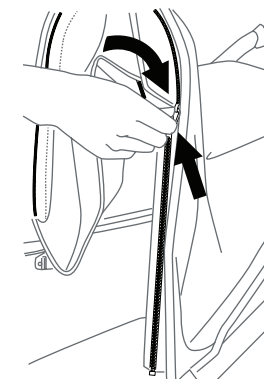


Fig. 6d

ASSEMBLY

- **To remove the canopy:** Press the tab on each end of the canopy, and lift up the entire canopy from the bottom ends slots of the child tray (Fig. 6e).

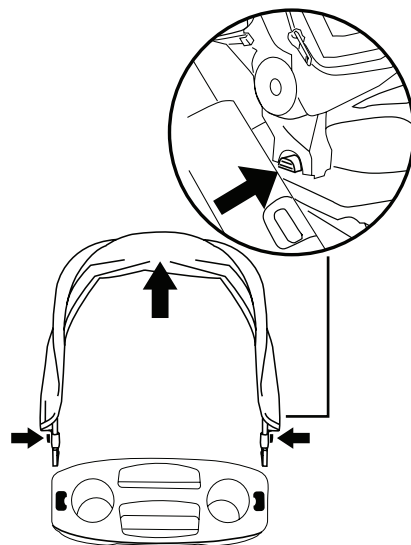


Fig. 6e

- **To remove the child tray:** push the tabs outward and pull out the child tray (Fig. 6f). **NOTE:** The canopy may also be installed without the child tray. Insert the ends into holes.

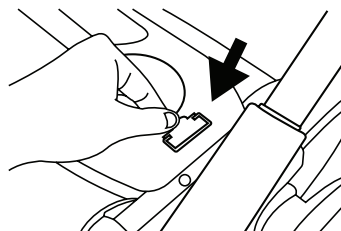


Fig. 6f

The child tray is not designed to hold the child in the stroller. Stay near and watch child during use. **NEVER** leave child unattended.

ASSEMBLY

PULL HANDLE STORAGE

- 7) • **TO USE THE HANDLE:** Locate the handle underneath the frame and press the release button to unlatch. Pull the bar completely out of the frame (Fig. 7a). Rotate up to desired position (Fig. 7b).
- **TO PUT IT AWAY:** Reverse step (Fig. 7a) ensure to push the handle completely in until it clicks into position. **NOTE:** Ensure the handle is resting on the storage hooks (Fig. 7c).

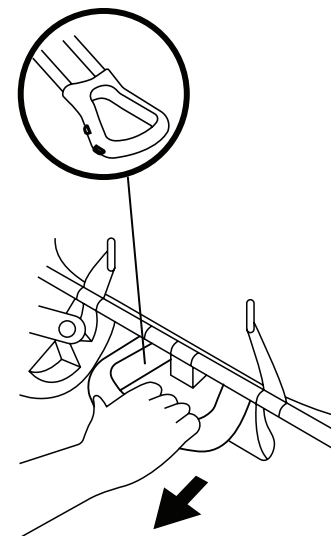


Fig. 7a

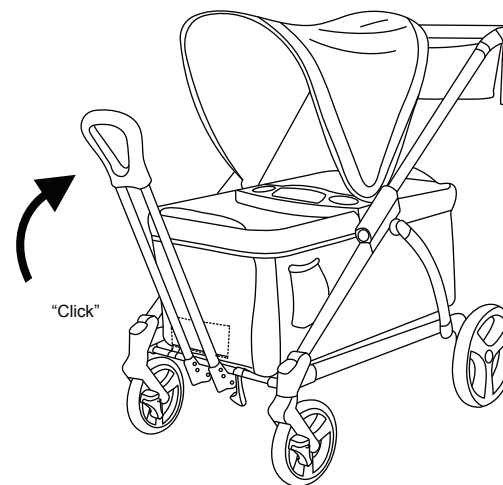


Fig. 7b

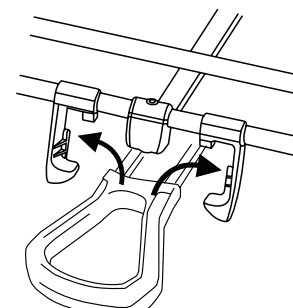
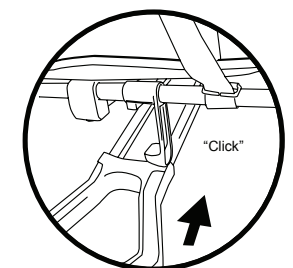


Fig. 7c

FOLD

TO FOLD STROLLER



⚠ WARNING: Care must be taken when folding the stroller to prevent finger entrapment.

CAUTION: Do not allow children near stroller while folding.

8) • Close the canopy by reversing (Fig. 6b).

- To use the double lock feature: (1) push the safety lock up. (2) Lift up the trigger to hold the safety lock into place. (3) Pull both triggers together (Fig. 8a).

- Push down on the stroller handle until the stroller is completely folded. Ensure the storage latch clicks and secures the stroller closed (Fig. 8b).


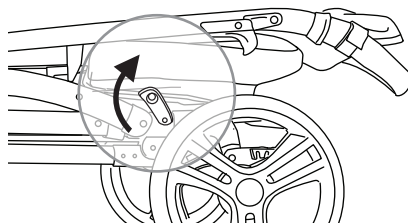
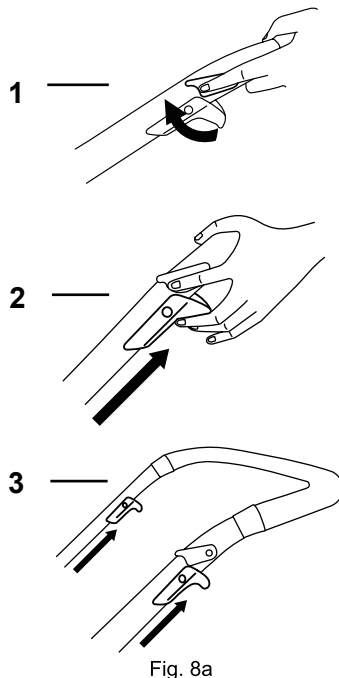


UNFOLD

TO UNFOLD STROLLER

⚠ WARNING: Make sure storage lock is engaged and lift or carry stroller by rear leg tubing.

- 9) •** Release the storage latch (Fig. 9a). Unfold the stroller frame by pulling the stroller handle upward until it clicks into locked position (Fig. 9b). The **RED** indicator on the handle will not be visible when stroller is fully open. If **RED** indicator are visible check open position lock is engaged before continuing.

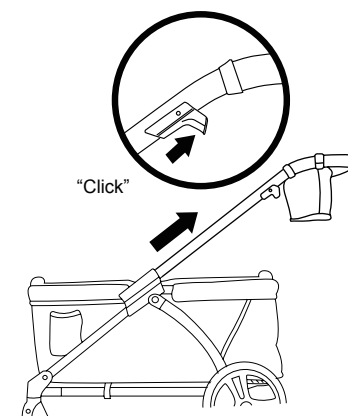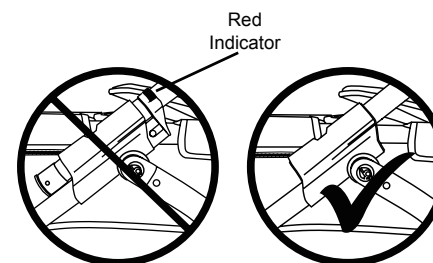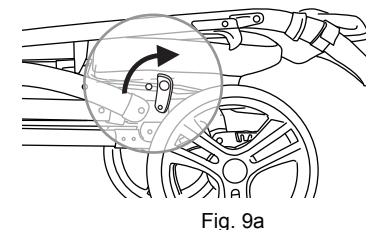

SAFETY

TO USE THE SAFETY HARNESS

⚠ WARNING: Avoid serious injury from falling or sliding out. Always use the safety harness.

⚠ STRANGULATION HAZARD: Child can strangle in loose straps. Never leave child in seat when straps are loose or undone.

- 10) • The shoulder straps of the 5-point harness have 3 attachment positions. Select the position that places the shoulder strap level with, or below the top of the child's shoulder (Fig. 10a).
- Place the crotch strap between your child's legs. Insert the Harness Buckles into the Center Clasp with the Button.
- Adjust straps for your child's comfort and safety by sliding buckles in either direction. Safety straps are to fit snug around your child (Fig. 10b).

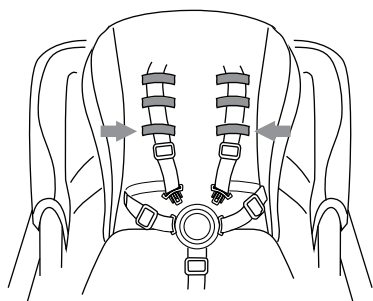


Fig.10a

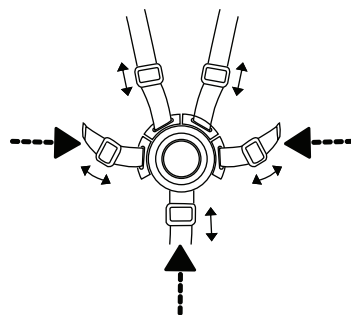


Fig.10b

TO RELEASE SAFETY BELT

- 11) • Push Button on Center Clasp, the four Harness Buckles will pop free (Fig. 11a).

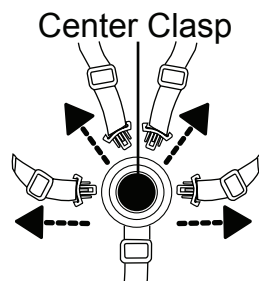


Fig. 11a

SAFETY

FRONT BRAKES

⚠ WARNING: Always set brakes when the stroller is not moving so that the stroller will not roll away. NEVER leave stroller unattended on a hill or incline as the stroller may slide down the hill.

- 12) • To engage the front brakes, apply light downward pressure to the brake levers located on each front wheel (Fig. 12). The front wheels are locked when there is a click.
- To release, gently lift up on the brake levers.

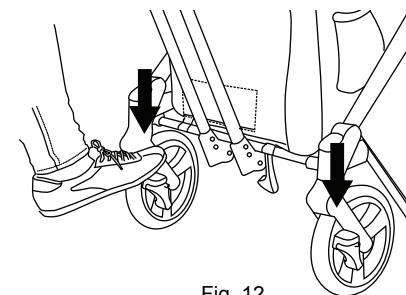


Fig. 12

REAR BRAKES

⚠ WARNING: Always set brakes when the stroller is not moving so that the stroller will not roll away. NEVER leave stroller unattended on a hill or incline as the stroller may slide down the hill.

- 13) • To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster (Fig. 13). **NOTE:** Check that the stroller will not move and that both brakes are properly applied.

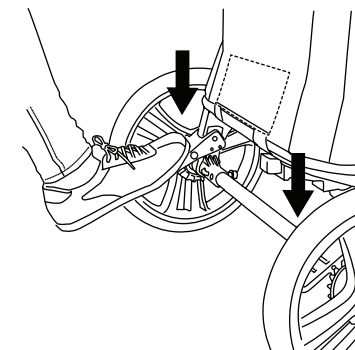


Fig. 13



- To release, gently lift up on the brake lever.

SAFETY

USING THE STROLLER TETHER STRAP

⚠ WARNING: Use the tether strap to stop the stroller from rolling away.



- 13) • The stroller is designed for use on flat or gently sloping surfaces, and may be unstable on higher sloping and uneven surfaces. Users should be aware of the possibility of the stroller rolling away or tipping over.
 - Never let go of the stroller when parked on an incline or sloping surface because it may slide or tip over. Always park on a flat surface and apply the brakes.
 - Always apply the brakes whenever the stroller is stationary.
- Wrist tether straps are provided on the pull handle (Fig. 13d) and handle grip (Fig. 13f). Slide your hand through the tether strap loop whenever you use the stroller (Fig. 13c & Fig. 13e). Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.
- To store away the wrist tether strap on the pull handle, wrap the strap around the handle (Fig. 13a) and snap the buttons closed (Fig. 13b).

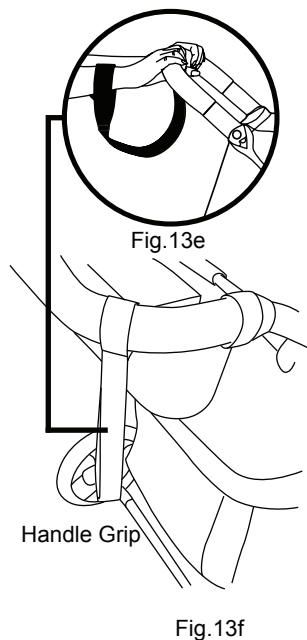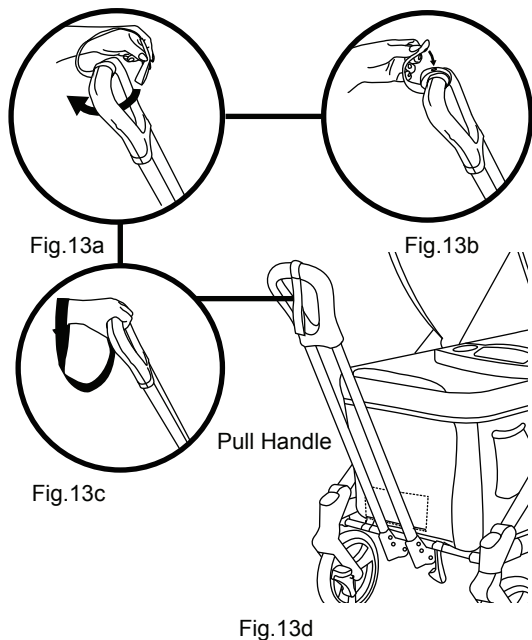

MAINTENANCE

WAGON FABRIC

- 14) • To detach the fabric: for cleaning or replacement, unzip from the front and rear of the wagon frame (Fig.14a).
 - Remove the screws on the underside of the frame (Fig.14b).
 - To reattach the fabric: ensure that the fabric is realigned to the corresponding front and rear end frames.
 - To ensure the fabric is securely attached, the zippers should be zipped and the hook and loop fasteners are attached (Fig.14a).
- NOTE:** Check for worn parts, torn material, or stitching on a regular basis. Replace or repair parts as needed.

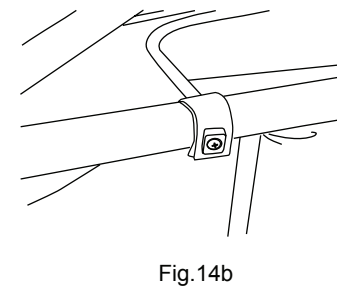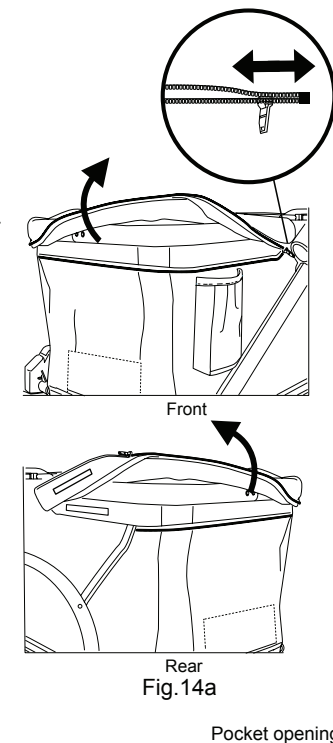

MAINTENANCE

REAR AXLE WHEEL REMOVAL

Attach the rear axle assembly and wheels as follows:

- 15)** • To release the entire rear wheel assembly, push in the rear wheel release. The wheel easily detaches from the bushing (Fig.15a).

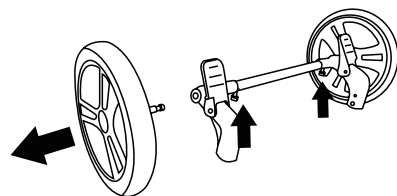


Fig.15a

- If replacing the rear axle, press the pin on each side behind the wheel hub. Pull the rear axle out from the hub (Fig.15b).

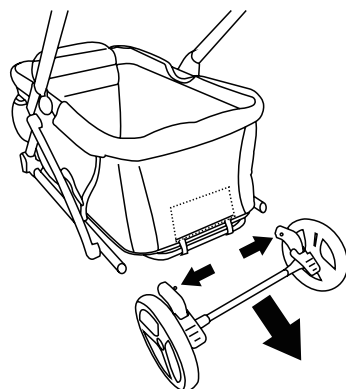


Fig.15b

MAINTENANCE

NOTE: NEVER use stroller if wheels do not lock into place. If you need assistance, please contact our customer service department KG Group at 039-555-9670 or support@kgelectronic.com.au

CARE AND MAINTENANCE

- **Cleaning Seat Pad:** Spot clean only - Surface wash small spots with mild solution of soap and water. Rinse with water to remove soap solution. Wipe or air dry.
- **Cleaning Stroller:** Surface wash stroller frame, plastic parts and fabric with mild solution of soap and water. Wipe surfaces with water to remove soap solution. Wipe or air dry.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.