



Quality • Comfort • Style

Baby Trend, Inc.
13048 Valley Blvd.
Fontana CA 92335

www.babytrend.com


Imported by:

KG Group
49-51 Sunmore Close,
Heatherton Vic 3202, Australia

Customer Service:
039-555-9670
support@kgelectronic.com.au

JG76XXXAU_102424

**Read all instructions BEFORE
assembly and USE of product.
KEEP INSTRUCTIONS FOR
FUTURE USE.**

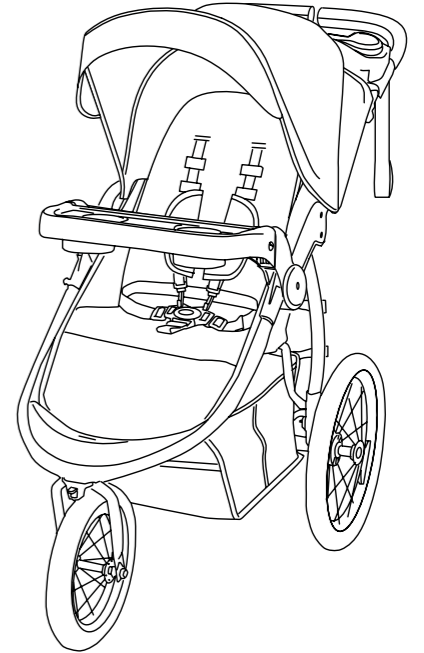

**Expedition® Race Tec™
Plus Jogger**

Instruction Manual

JG76XXXAU


 **babytrend®**
Quality • Comfort • Style

PARTS


Check that you have all the parts for this model before assembling the stroller.




Child Tray




Mobile Phone Positioning Parent Tray

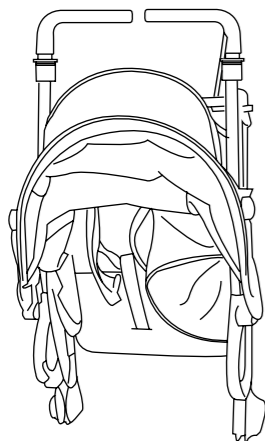

Stroller and Canopy

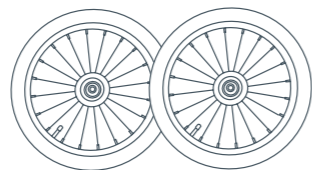

Rear Wheels (2x)

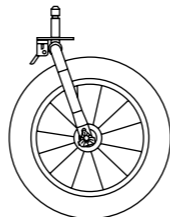

Front Wheel

1

PARTS

Diagram of parts and features

A. Parent Tray

B. Handlebar Release

C. Mobile Phone Positioning

D. Release Lever

E. Seatback Positioning

F. Tether Strap

G. Rear Wheels

H. Rear Breaks

I. Canopy / Visor

J. 5 point Harness

K. Child Tray


L. Fold Strap On seat

M. Fender

N. Front - Wheel Lock

O. Front Wheel


P. Storage Basket

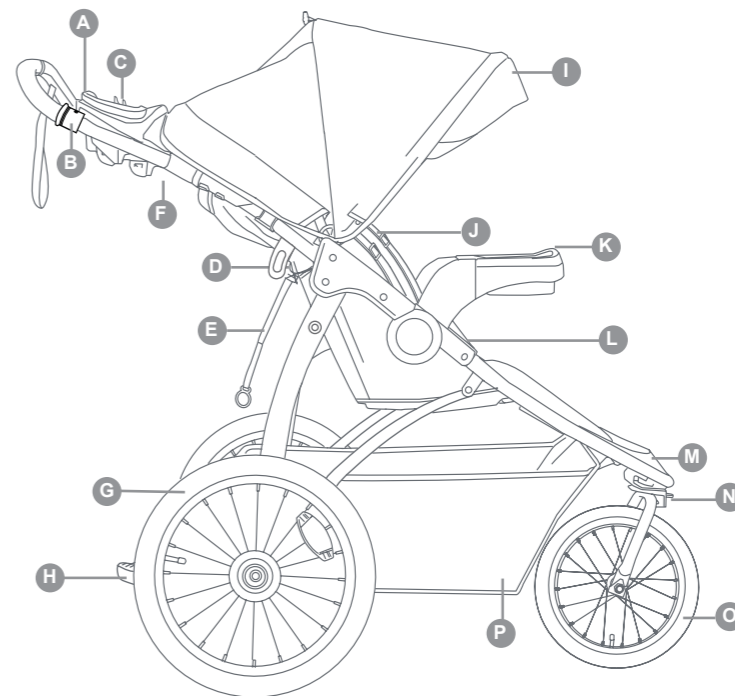

2

WARNING


 **WARNING:** Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

 **WARNING:** Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out, always use the safety harness and insure that the children are properly positioned according to these instructions.


 **WARNING:** Never leave children unattended.

 **WARNING:** Care must be taken when folding and unfolding the stroller to prevent finger entrapment.


 **WARNING:** Wheel can detach and cause tip over. Pull on the wheel to assure it is securely attached.


 **WARNING:** Care must be taken when folding stroller to prevent damage. Make sure all accessories, mobile phones, diaper bags or purses are removed before folding. Failure to remove items in, or on the stroller so may result in damage to the stroller or the item (s) if not removed. Baby Trend® will not be liable or warrant any damage.


WARNING

 **WARNING:** TO AVOID INJURY OR DEATH:

- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STOLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER OTHERWISE THEY MAY BE INJURED.

 **WARNING:** USE THE HARNESS AT ALL TIMES. USE THE TETHER STRAP TO STOP THE STROLLER FROM ROLLING AWAY.

 **WARNING:** Not intended for infant sleep and should never be used for this purpose.

 **WARNING:** FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

- PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.

- **NEVER** leave the harness buckled when not fitted to a child in the stroller because the harness can form loops which may pose a strangulation hazard.
- **ALWAYS** take care and pay attention when erecting and folding the stroller as moving parts can cause injury.

WARNING

- **ALWAYS** make sure the storage latch is properly engaged before moving or lifting the stroller.
- **CAUTION:** This single jogger is designed for one child only. Use with more than one child may cause an unbalanced condition which can injure/ harm your child.
- Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause a hazardous, unstable condition. No after market accessories are approved for use with this product.
- The maximum weight that can be carried in the storage basket is 5 pounds (2.27kg). Excessive weight may cause a hazardous unstable condition to exist.
- The maximum weight that can be carried in the child tray is 3 pounds (1.36 kg).
- The maximum weight that can be carried in the parent tray is 2 pounds (0.91 kg).
- Be certain the stroller is completely opened and locked in place before allowing a child near the stroller.
- The child occupant must not exceed 50 lbs (22.67 kg) or over 42 inches (106.7 cm) tall when used with the maximum weight on the child tray, parent tray and basket. Do not exceed 60 lbs (27.21 kg) including the weight used in the accessories. Use of the stroller with a total weight more than 60 lbs (27.21 kg) will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- We recommend that the child occupant be at least 6 months of age prior to use of the stroller for jogging. Because children develop at different rates, please discuss the use of a jogging stroller with your health care provider prior to jogging with your child.
- To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.

WARNING

- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service to arrange for repair or obtain replacement parts.

IMPORTANT! To ensure safe operation of your product, please follow these instructions carefully. Please keep these instructions for future reference.

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. NEVER use if any parts are missing or broken.

IMPORTANT! Adult assembly is required.

- **ALWAYS** use the safety harness and attach all straps correctly.
- **NEVER** use the stroller on stairways or escalators.
- **NEVER** use the stroller with roller skates, in-line skates, skateboards or bicycles.
- **NEVER** allow your stroller to be used as a toy.
- **ALWAYS** keep stroller away from fire or any open flame.

UNFOLD THE STROLLER FRAME AND FRONT WHEEL ASSEMBLY

⚠️ WARNING: This wheel utilizes a front wheel double nut locking system. Please follow all of these instructions to ensure the safety of your child. Failure to follow these instructions could result in serious injury or death.

- 1) • To unfold, unlock the release lever by pulling it out from the rivet (Fig. 1a). Unfold the stroller frame by pulling upward on the stroller handle until the frame locks (Fig. 1b).

NOTE: Ensure the stroller frame is locked by pressing down on the handle.

- Underneath the front end of the frame locate the front wheel hub (Fig. 1c). Firmly insert the front wheel into the hub until it clicks into position.

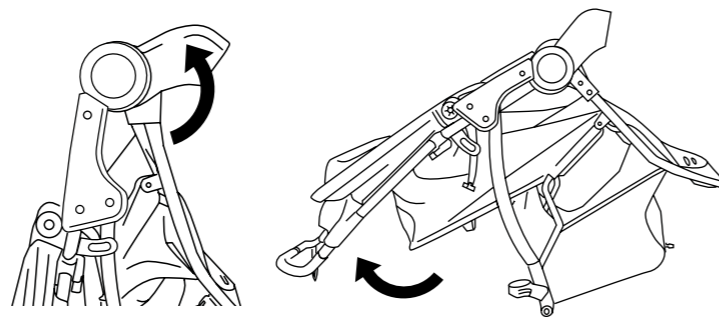


Fig. 1a

Fig. 1b

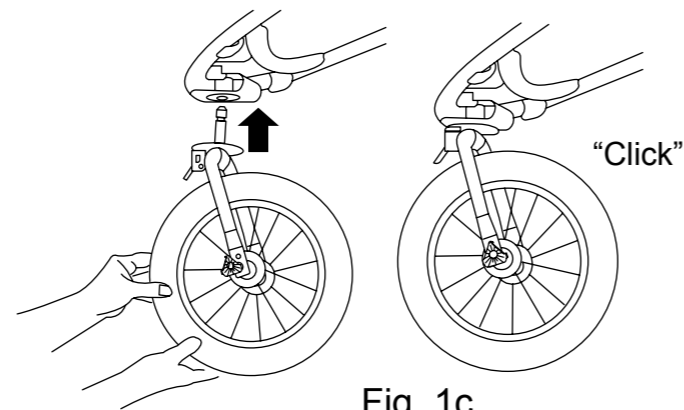


Fig. 1c

TESTING FOR PROPER WHEEL INSTALLATION

⚠️ WARNING: FALL HAZARD: ALWAYS check the double nut locking system before each use to ensure that the front wheel is securely fastened to the frame. See (Step 20) for tightening.

- 2) • Lift front end of the stroller up and pull down on wheel to ensure its attached (Fig. 2).

NOTE: The wheel must not detach.

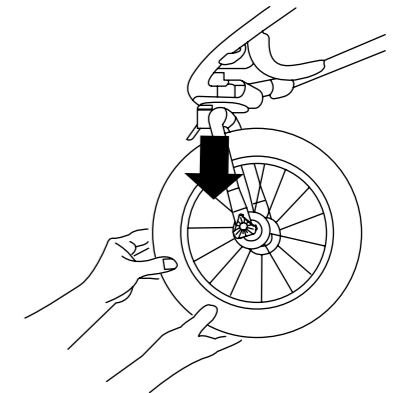


Fig. 2

REAR WHEEL

- 3) • Lean the stroller forward to rest on front stroller frame. To attach the rear wheels, align the wheels axle pin to the receiving end of rear axle. Push the wheel axle pin inward until secure. Repeat the process for the other wheel (Fig. 3). Check that each wheel is set into place by pulling on the wheel.

- **NEVER** use stroller if wheels do not lock into place. If you need assistance, please contact the customer service line for additional assistance: KG Group at 039-555-9670 or support@kgelectronic.com.au

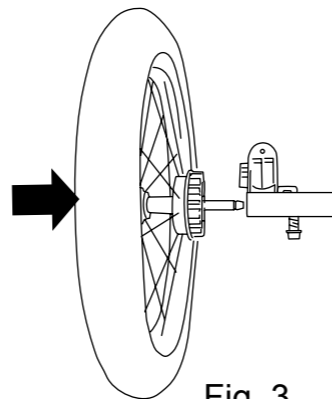


Fig. 3

FRONT WHEEL LOCK

⚠️ WARNING: FALL HAZARD
 from tip over before running, jogging, or walking fast, lock the front wheel from swiveling.

- 4) • The front wheel is equipped with a swivel locking device. Push the button on the wheel upward to engage the lock and push downward to disengage the locking device (Fig. 4).
NOTE: Locks in two directions. Direction (1) recommended.

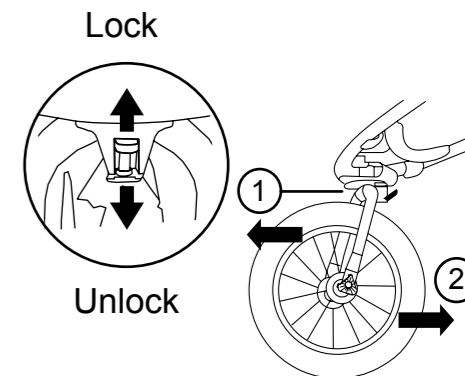


Fig. 4

SEATBACK POSITIONING

- 5) • To recline the seat press the clip ends together to release and pull down. To place seat into an upright position, press the clip ends together while holding the end of strap. Push clip upwards to secure into desired position (Fig. 5).

NOTE: the upright position should be used only for a child that is at least 6 months old. Always re-adjust the safety harness, including the shoulder belts, when repositioning the seat.

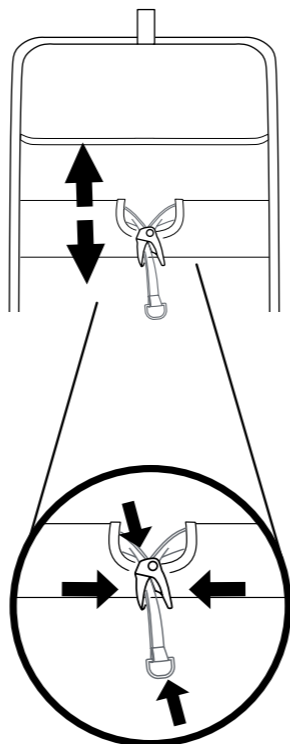



Fig. 5

POSITIONING THE HANDLEBARS

- 6) • Pull back the spring-loaded release on both sides to position the handlebars.

NOTE: Bars will click into position (Fig 6).

- Bars position (1)
- Bars position (2)
- Bars position (3)
- Bars position (4)

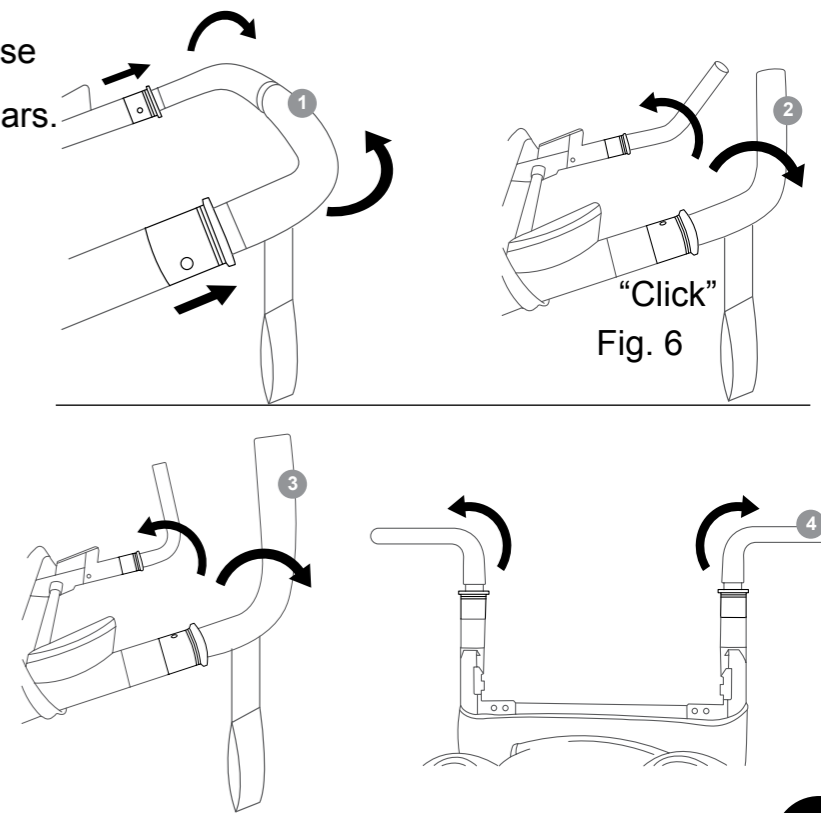

CHILD TRAY

⚠️ WARNING: The child's tray is not a restraint device: always secure your child with the seat belt. **DO NOT** lift the stroller by the child's tray. Use care when attaching the child's tray on the stroller with a child in the stroller. Do not place hot liquids or more than 3 pounds (1.36 kg) in the child tray. Serious burns or unstable conditions could result.

- 7) • **To attach the child tray:** hold the tray at a 90° angle and insert into the receiving end of stroller armrest (Fig. 7a). Rotate tray downward to opposite side and snap closed (Fig. 7b).
- **To access the child seat:** Press tray release button and rotate upward on the tray (Fig. 7c).
 - **To remove the child tray:** Press the tray release button (Fig. 7c) and rotate the tray 180° and pull it out (Fig. 7d).

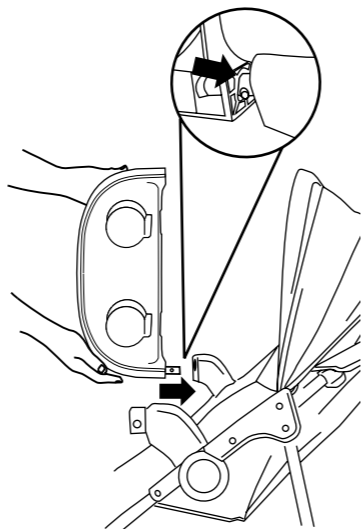


Fig. 7a

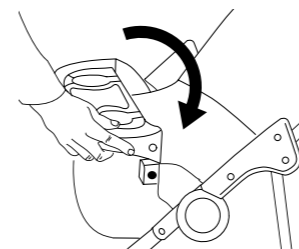


Fig. 7b

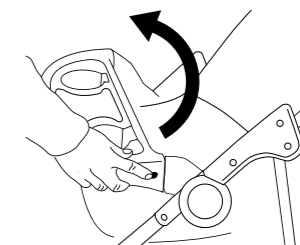


Fig. 7c


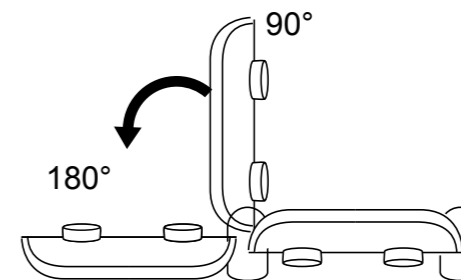


Fig. 7d

MOBILE PHONE POSITIONING PARENT TRAY

⚠️ WARNING: Do not place hot liquids or more than 2 pounds (0.91kg) in the parent tray. Serious burns or unstable conditions can result.

⚠️ WARNING: Care must be taken when folding stroller to prevent damage. Make sure all accessories, mobile phones, diaper bags or purses are removed before folding. Failure to remove items in, or on the stroller so may result in damage to the stroller or the item (s) if not removed. Baby Trend® will not be liable or warrant any damage.

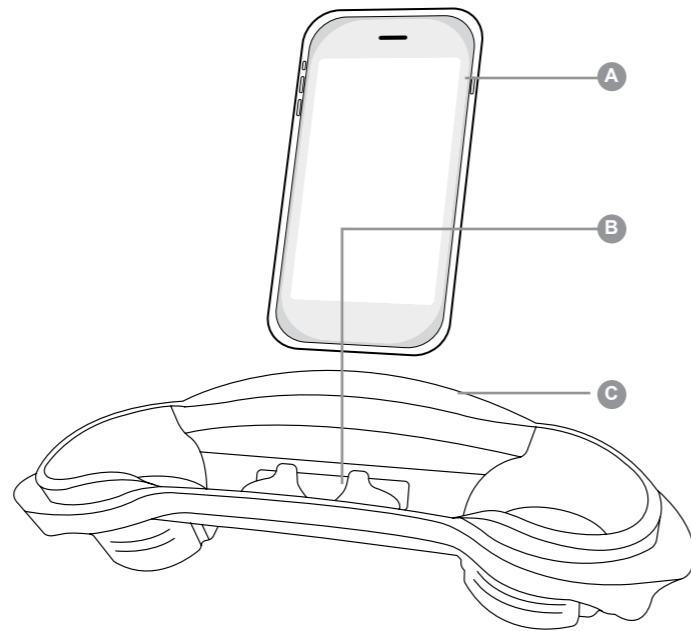

- A. Mobile Phone
- B. Mobile Phone Positioner
- C. Parent tray

8) • **To Insert The Parent Tray:** Always install the parent tray prior to the canopy. Locate the tray housing on the stroller frame. Align and set the parent tray tab holes into the inner housing where the small tab locks are located. Press in firmly to click into position (Fig. 8a).

• **Mobile Phone Positioner:** Align mobile phone to the clip and insert it through the grips. Make sure to push the phone all the way down into the positioner (Fig. 8b).

NOTE: Some mobile phones require pulling the tabs to insert. The positioner may not accommodate all mobile phones or devices. Do not use positioner as a secure holder when not in use or if your phone is loose or is too large.

• **Removal:** Under the stroller frame locate the parent tray tabs. Press them inwards and lift up the tray from the housing (Fig. 8c).


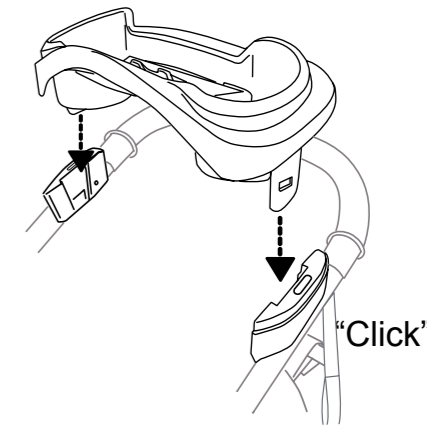


Fig. 8a

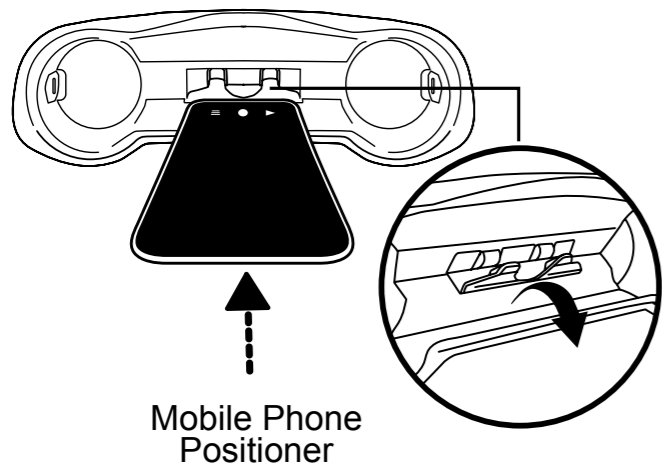

Mobile Phone Positioner

Fig. 8b

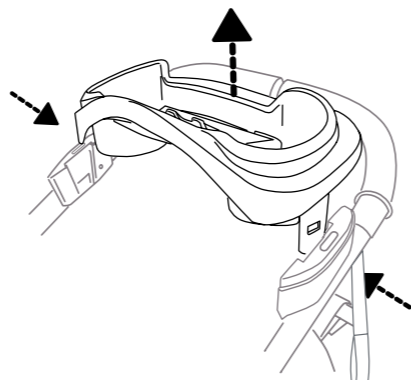


Fig. 8c

CANOPY


9) • To set the canopy:

A) Insert the arched rod into the stroller frame and ensure both sides click in (Fig. 9a).

B) Wrap each side of the canopy fabric around the stroller frame to secure in place. Pull forward on the front edge of the canopy while holding the rear of canopy in place (Fig. 9b).


At the front edge of the canopy, you can fold the visor in or out for additional shade.

C) To close the canopy: push backwards on the front edge towards handle (Fig. 9c).

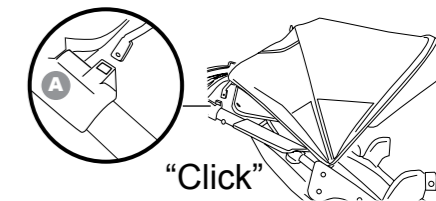


"Click"

Fig. 9a

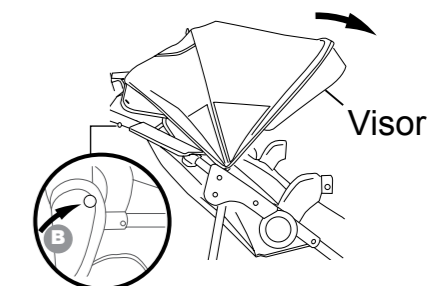

Visor

Fig. 9b

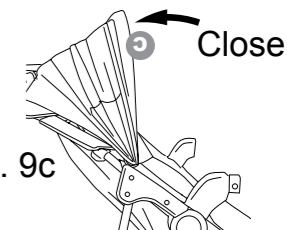

Close

Fig. 9c

SECURE THE STORAGE BASKET

If not assembled:

- 10) • Always ensure the basket is attached to the frame. Fold the flap over the rear bar and snap the 3 buttons closed (Fig. 10a).

NOTE: Ensure that the 3 straps are snapped closed on each side of the stroller (Fig. 10b).

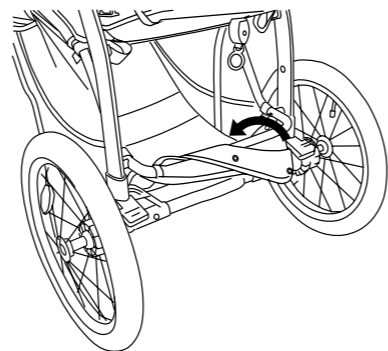


Fig. 10a

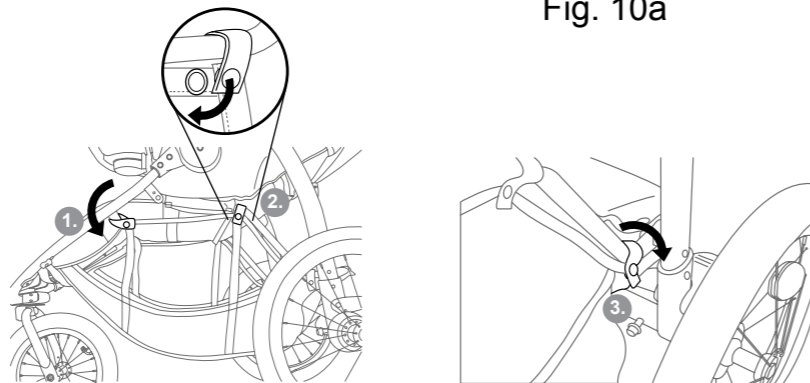


Fig. 10b

REAR BRAKES

⚠️ WARNING: Always check with your pediatrician for a recommended starting age / weight for your baby in an all terrain stroller.

⚠️ WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. **NEVER** leave stroller unattended on a hill or incline as the stroller may slide down the hill.

- 11) • To engage rear brakes: push down firmly on each brake to lock (Fig. 11a).
NOTE: Check that the stroller will not move and that both brakes are properly applied.
 - Push up on brake to unlock brakes (Fig. 11b).

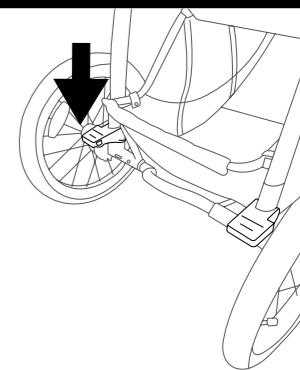


Fig. 11a

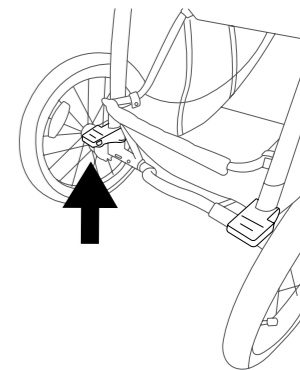


Fig. 11b


JOGGING WITH YOUR STROLLER

STRANGULATION HAZARD! Children have strangled when straps have wrapped around their neck. When not in use hook the tether strap onto the stroller handle. Keep this stroller tether strap out of the reach of children.

FALL HAZARD: Fall hazard from tip over before running, jogging, or walking fast, lock the front wheel from swiveling. Always hold both handles while running, jogging, or walking fast. Holding one handle can result in tip over.

12) • When you are jogging with your child, use the following safety features:


- **LOCK THE FRONT SWIVEL WHEEL IN STRAIGHT POSITION**

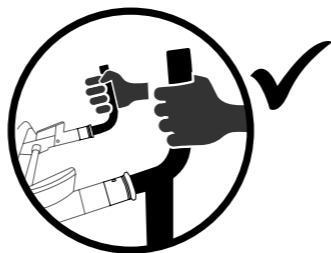

USING THE STROLLER TETHER STRAP

WARNING: Use the tether strap to stop the stroller from rolling away.

- The stroller is designed for use on flat or gently sloping surfaces, and may be unstable on higher sloping and uneven surfaces. Users should be aware of the possibility of the stroller rolling away or tipping over.
- Never let go of the stroller when parked on an incline or sloping surface because it may slide or tip over. Always park on a flat surface and apply the brakes.
- Always apply the brakes whenever the stroller is stationary.
- A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.

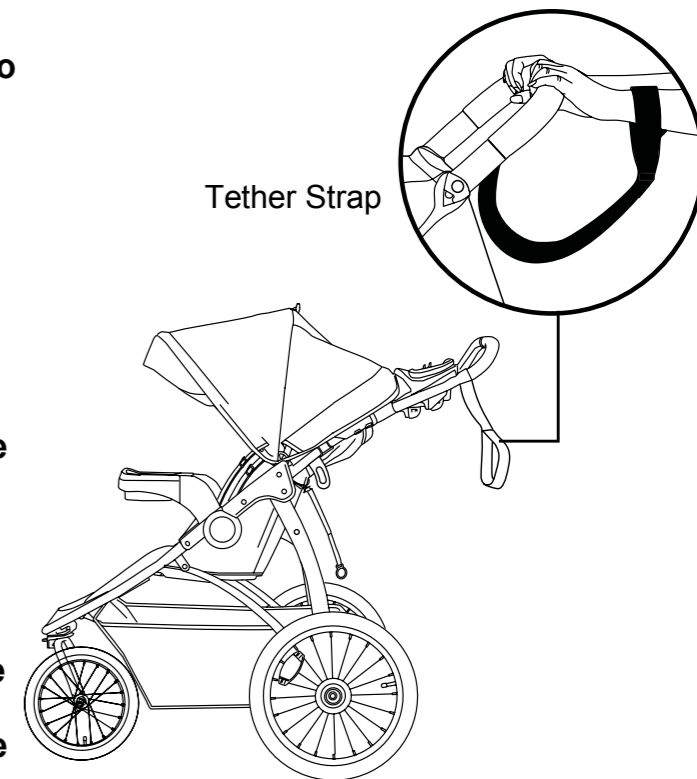

TIRE INFLATION

- 13) • Check the pressure before using the stroller. Tires are shipped un-inflated. The tires should be inflated on a regular basis to the P.S.I. specified on each tire.

NOTE: Only use hand pump. **DO NOT USE** air compressor to inflate the tire.
*Pump not included. **DO NOT INFLATE** above the maximum recommended inflation pressure that is on the side of the tire.

SECURE THE CHILD

⚠️ WARNING: Avoid serious injury from falling or sliding out. Always use the safety harness.
STRANGULATION HAZARD: Child can strangle in loose safety harness. Never leave child in seat when safety harness is loose or undone.

- 14) • The shoulder straps of the 5-point harness have multiple positions. Select the position that places the shoulder strap level with, or below the top of the child's shoulder (Fig. 14a).

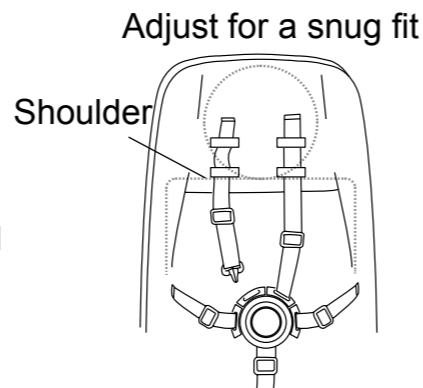


Fig. 14a

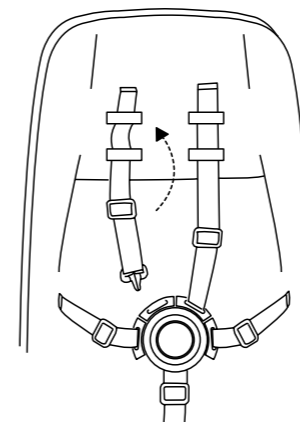


Fig. 14b

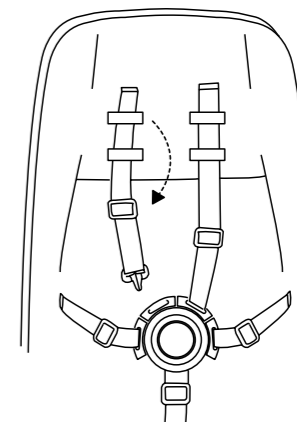


Fig. 14c

- To adjust the harness to the next height level, unhook the strap and pull it through the loop according to the child's height when sitting (Fig. 14b).
- To adjust the harness to a lower height level thread the clip back into the slot and pull it out through the desired lower level (Fig. 14c).

- To secure the child, place the safety harness around the child's waist and over the shoulders. Place the crotch strap between the child's legs. Insert the male end of each shoulder/waist belt into the crotch buckle. Tighten all buckles to the proper fit for the child (Fig. 14d).

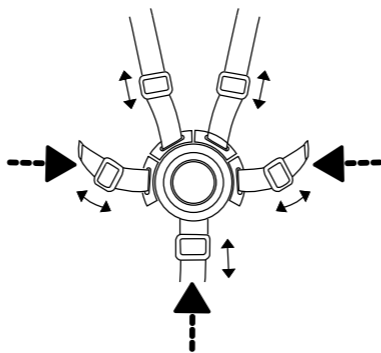


Fig. 14d

HARNESS RELEASE BUTTON

- 15) • **RELEASE:** Push the button on the center clasp and for all the harness straps to release (Fig. 15).

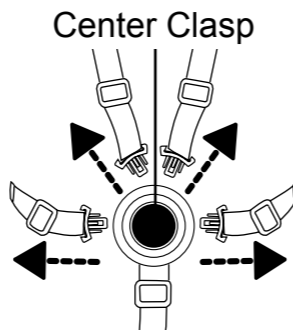


Fig. 15

TO FOLD STROLLER

⚠️ WARNING: Care must be taken when folding stroller to prevent damage. Make sure all accessories, mobile phones, diaper bags or purses are removed before folding. Failure to remove items in, or on the stroller so may result in damage to the stroller or the item (s) if not removed. Baby Trend® will not be liable or warrant any damage.

⚠️ WARNING: Care must be taken when folding the stroller to prevent finger entrapment.
CAUTION: Do not allow children near stroller while folding.

16) • Recline the seat (refer to step 5) and close the canopy (refer to step 9).

- Locate the strap in the seat pocket. Using one hand on each strap underneath the seat fabric, pull up to unlock the frame (Fig. 16a).
- Holding the strap lift the stroller frame until it fully closes (Fig. 16b).

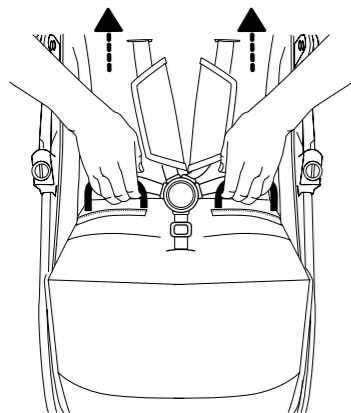


Fig. 16a

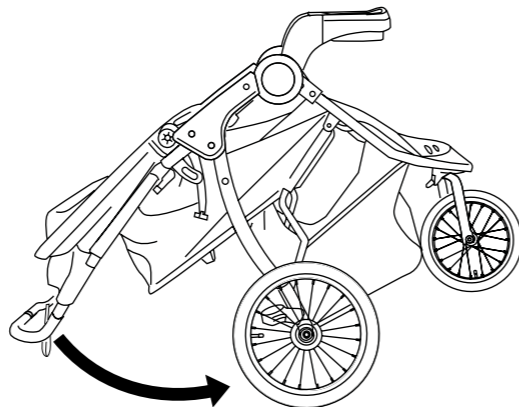


Fig. 16b

⚠️ WARNING: Make sure storage lock is engaged and lift or carry stroller by rear leg tubing.

- Compress the stroller and lock the release lever (Fig. 16c).
- Always tuck the pull strap back into the seat pocket (Fig. 16d).

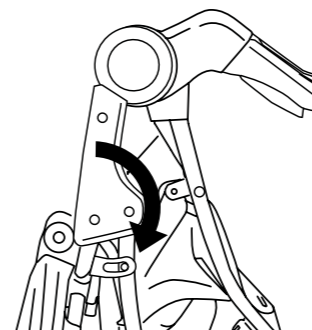


Fig. 16c

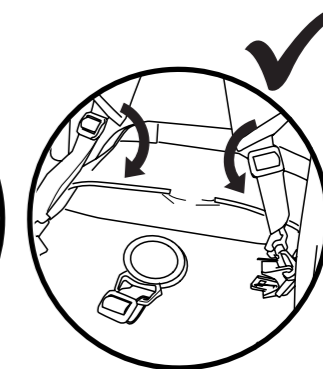
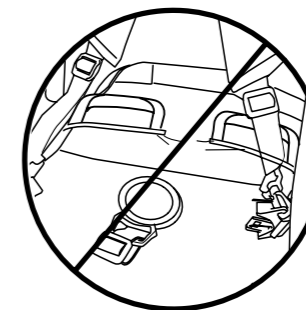


Fig. 16d

TO UNFOLD STROLLER

⚠️ WARNING: Care must be taken when unfolding the stroller to prevent finger entrapment.

CAUTION: Do not allow children near stroller while unfolding.

17) • Stand the stroller on the ground with all three wheels touching the ground. Release the release lever, which is located on the right side (Fig. 17a).

• Lift up on the stroller handle with both hands until the stroller frame is erected and locked in the open position (Fig. 17b). The frame will click when it is completely in the open position.

NOTE: Ensure the stroller fully extends and locks prior to placing your child in the stroller.

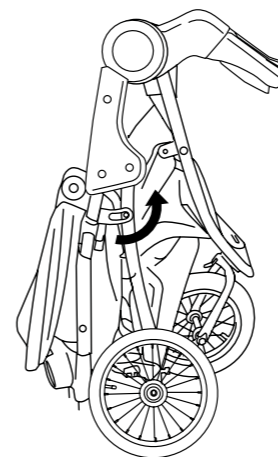


Fig. 17a

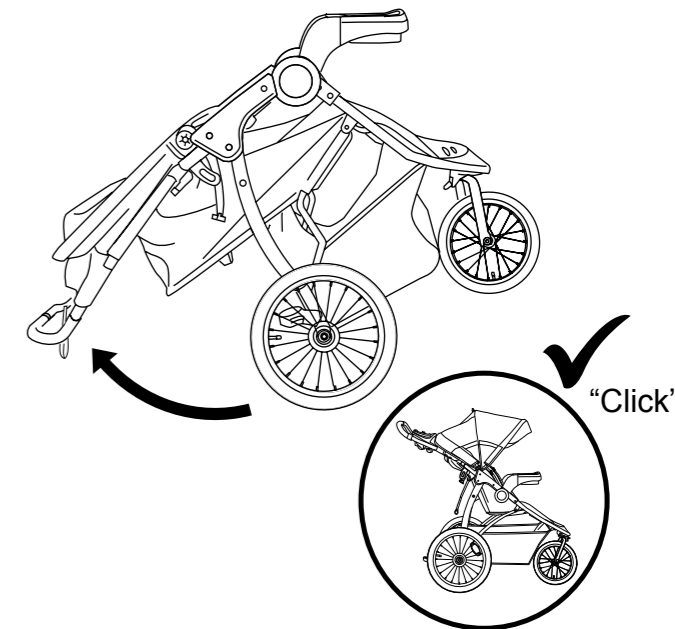


Fig. 17b

FRONT WHEEL - MAINTENANCE

- 18) • If replacing the front wheel, remove axle nuts and retainer plates before removing wheel (Fig. 18a). Attach replacement wheel to front fork (Fig. 18b).
- Slide both retainer plates into the axle with the tabs inserting into the slots of the fork. Then use the axle nuts to tighten all parts securely onto the fork (Fig. 18c). *Check these parts regularly and ensure to always keep the axle nuts tightened.*

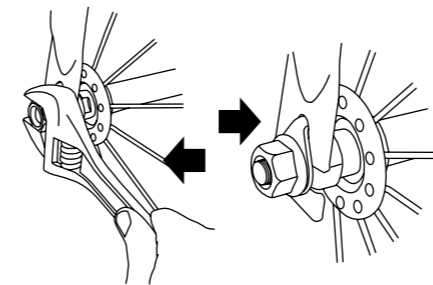


Fig. 18a

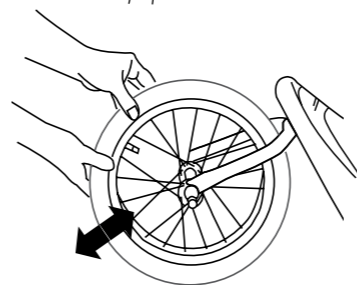


Fig. 18b

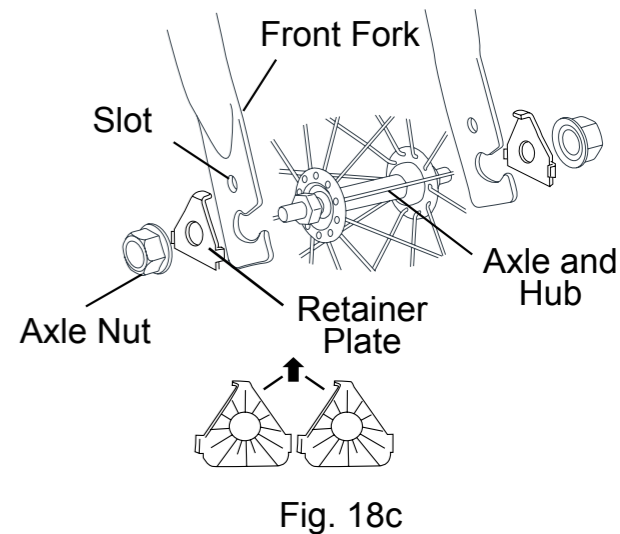


Fig. 18c

MAINTENANCE

- 19) • To release the entire front wheel assembly, push the front wheel release tab inward. The wheel easily detaches from the housing (Fig. 19).

REAR WHEEL - MAINTENANCE

- 20) • To release the entire rear wheel assembly, push in the rear wheel release. The wheel easily detaches from the bushing (Fig. 20).

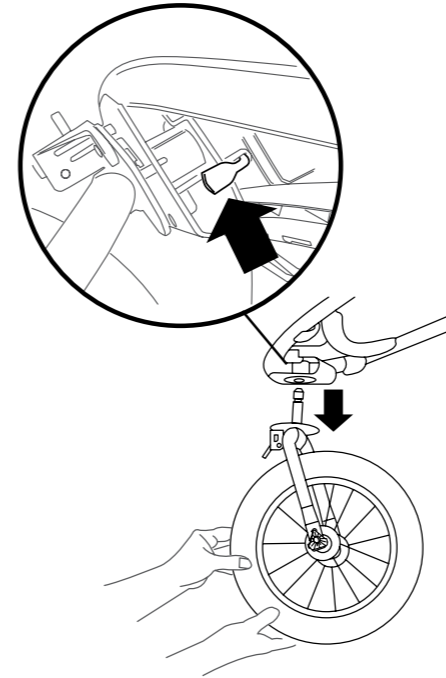


Fig. 19

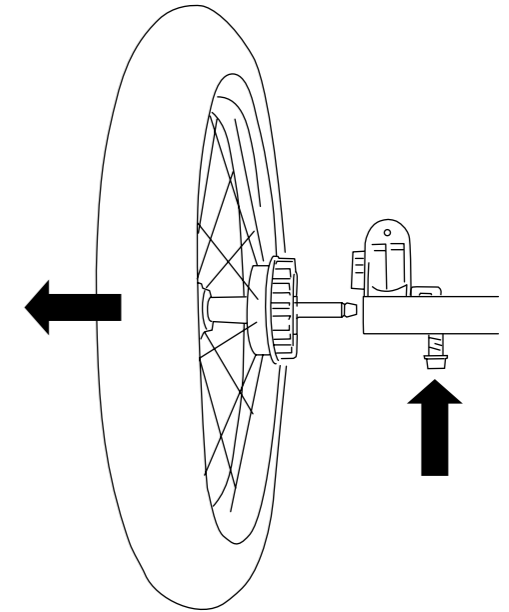


Fig. 20

MAINTENANCE

CARE AND MAINTENANCE

- **DO NOT MACHINE WASH SEAT.** It should only be wiped with mild soap. Do Not soak material, **NO BLEACH.** To clean stroller frame use only mild soap and water, **NO BLEACH.** Check Stroller for loose screws, worn parts, torn material or stitchings on a regular basis. Replace or repair parts as needed.

Contact the customer service line for additional assistance:
KG Group at 039-555-9670 or support@kgelectronic.com.au